




## Telium2 – Changing Date and Time

1. Restart the pin pad by pressing [-] and Yellow [Clear] simultaneously until the pin pad beeps and on the iPP3xx and iSMP restart the pin pad by pressing [.,#\*] and the Yellow [Clear] keys simultaneously until the pin pad beeps
2. Wait for the pin pad to display the RBA or UIA initialization screen which will look similar to the photo below...

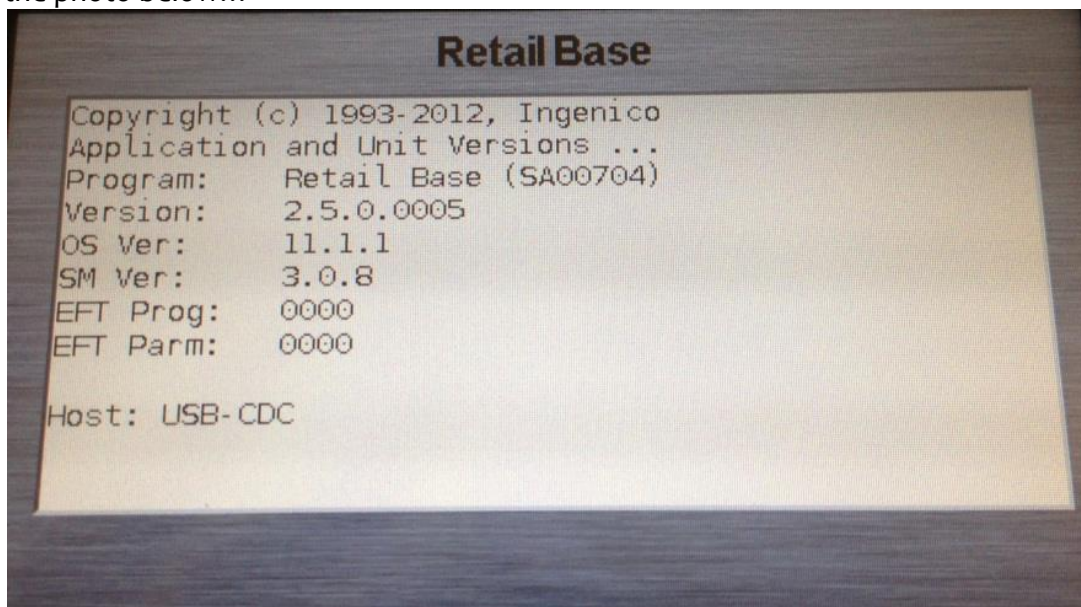

3. When the above screen appears (RBA or UIA initialization screen) press... [2] [6] [3] [4] [Enter] [+] [+]
4. If successful the Functions menu should appear (below) if the Functions menu does not appear then please go back to step 1



5. Select Telium Manager
6. Select Initialization
7. Select parameters
8. Select Date and Time
9. From here you can configure your date and time accordingly.
  - a. PLEASE MAKE SURE YOU USE MILITARY TIME!!!!
    - i. i.e.: 1:00 pm = 13:00
10. Once finished, please press the **RED** cancel button until the device asks you to save and reboot. Please select “Yes” for the save and reboot option.