



## Checking EMV Reader on MX9XX

1. Enter the device as a supervisor by pressing the 1,5, and 9 buttons. This will bring you to a menu that asks you to input a password (password below).
  - a. Password: 166832
2. Once in the system menu, select the "Information" tab.
3. From here, select the "Installed S/W" tab.
4. At this point, you scroll down until you find "frmAgent" on the right-hand side as seen below.

Home > Info > Installed S/W

	Basic System	Ports & Options	Installed S/W
1.9	usr1	[faflash]	
1.2	usr1	[fafrms]	
<b>5.0.1</b>	usr1	<b>[frmAgent]</b>	
3.25n	usr1	[guimgr]	
2.4	usr1	[lib_aci]	
2.0	usr1	[lib_bintable]	
...	...	...	...