




Changing COM type on Engage Px00/Mx00

- Once device is powered on press 1, 5, and 9 all at the same time.



- Once you see the screen above, press 1, 5, and 9 all at the same time once again.

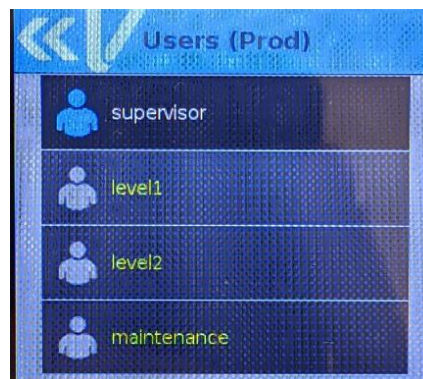

- When prompted, enter 1668321 to log in as supervisor.
- Follow the path
 - Administration>Config>Config.usr1
- Give the device a second to compile the parameters.
- Once in Config.usr1, scroll down until you see "SACOM" on the field to the left.

- Select the text that displays the current COM type and give the device a second to pull up the keyboard.
- Delete the current listing and choose one of the comm types from the list below.
 - COM1
 - NOTE: when choosing COM1, you must also change the SABAUD parameter to “115200”
 - If SABAUD does not exist, you must add the parameter. (for help with this, please contact your hardware vendor)
 - USBD
 - TCPIP
- Press Enter to save your choice.
- Back out to the main supervisor home menu screen and select “Exit” and then “Reboot”
- The device will boot to the chosen COM type.